

Sandstone Z Hook Bracelet

- Designed by Tracy Gonzales (for TierraCast®)


Supplies:

- Z Hook
- 2 Snap Rivet Sets
- 2 Twist Spacers
- 1/2" Leather Strap
- Hammer
- Bench Block
- Scissors
- Leather Hole Punch



Directions:

1. Cut leather to wrist measurement + 2".
2. Mark leather 1/4" from one end.
3. Thread leather 1" through closed half of Z Hook.
4. Fold over leather and punch a hole through both layers.

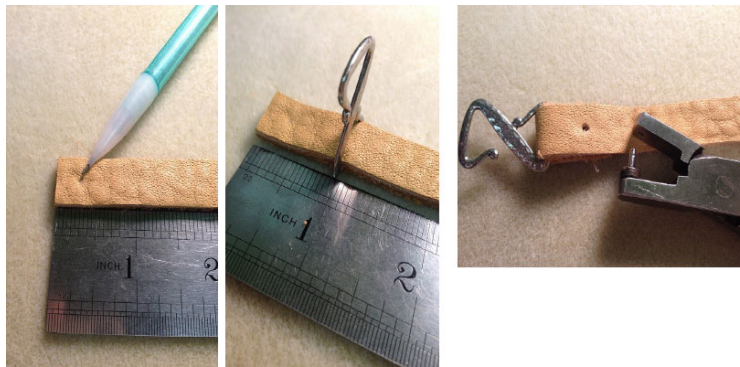

5. Push the post half of the rivet set from the back. Set the spacer on top and press the top half of the rivet set down to snap together.
6. Place rivet set onto bench block. Hammer rivet top until firmly set.
7. Mark leather 1/4" from the other end.
8. Fold leather over at the 1" mark and repeat the hole punch and riveting process.



Tip: To prevent rivet head from flattening, use a rivet setter. This concave tool will keep the rounded appearance of the rivet head intact.